USER MANUAL

MPL026P HD 1080P

CONTENTS

1. Package Contents..... 1
2. Introduction..... 1
3. Features..... 1
4. Hardware Overview..... 2
5. Remote Control..... 3
6. Start the MPL026P..... 4
7. Setting Up..... 5
   7.1 Video Setup..... 5
   7.2 Other Setup..... 6
8. Using the MPL026P..... 7
   8.1 Play Media Files on the CF Card..... 7
   8.2 Using the Remote Control when Playing..... 8
9. Troubleshooting..... 9

1. PACKAGE CONTENTS

1. MPL026P
2. Remote Control
3. User Manual
4. CF Card Protective Cover
5. Power Adapter (DC 12V, 1.5A)
6. Video & Audio Cable
7. VGA to Y.Pb.Pr Cable (optional)

2. INTRODUCTION

The Eyezone MPL026P is a high-performance and low-cost digital signage player that allows you to play advertising contents in 1080p HD. No software is required, simply insert the CF memory card with media files and it will play the contents automatically. The MPL026P offers multiple outputs to match your display's input including HDMI, VGA and YPbPr (optional VGA to YPbPr cable).

The MPL026P is an ideal for advertising, retail displays, digital poster, museum exhibits and other applications.

3. FEATURES

- Supports multiple file formats: Video (WMV9), Picture and Music.
- Supports HDMI, VGA, Y.Pb.Pr (optional VGA to Y.Pb.Pr cable) and Audio output.
- Resolution:
  - HDMI: 480P/ 720P/ 1080i/ 1080P.
  - VGA: 640x480/ 800x600/ 1024x768/ 1280x1024/ 1360x768.
  - YPbPr: 480P/ 720P/ 1080i
- Supports CF memory card.
- Supports Auto-Play function.
- Supports Slideshow function.

4. HARDWARE OVERVIEW

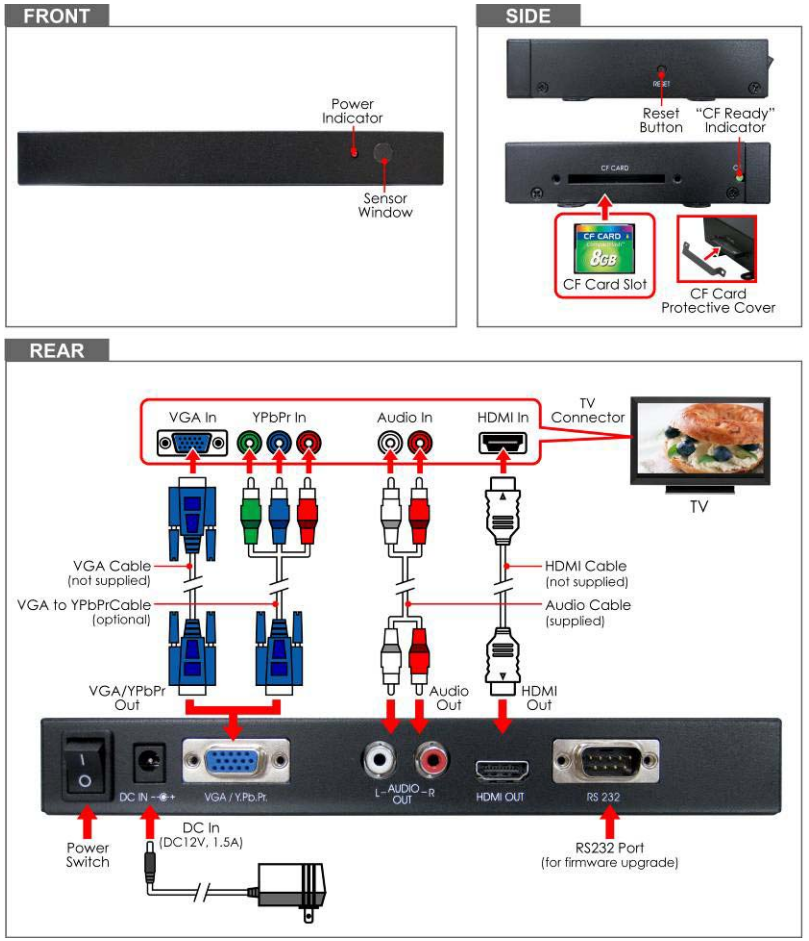

- **"RESET" Button:** Restart the MPL026P.
- **CF Card Slot:** Insert the CF memory card.
- **"CF READY" Indicator:** Steady green confirms that the CF card is inserted correctly.
- **Power Switch:** Toggle between main power on & off.
- **DC Input:** Connect the supplied power adapter. (DC 12V / 1.5A)
- **VGA/ Y.Pb.Pr Output:** Connect to VGA/ YPbPr input on TV (VGA to Y.Pb.Pr Cable is optional).
- **L-Audio-R Output:** Connect to Audio input on TV or external speakers.
- **HDMI Out:** Connect to HDMI input on TV.

5. REMOTE CONTROL

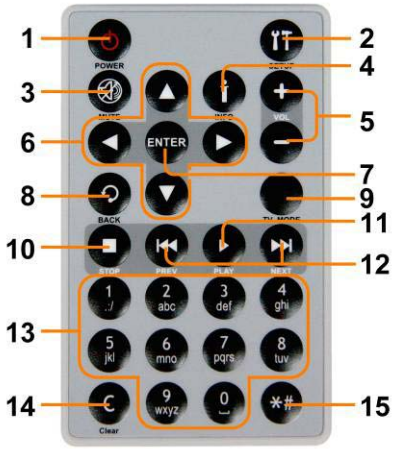

1 Power on/ off
2 Open the setup menu
3 Mute sound
4 Show the information of the selected file
5 Volume up/ down
6 Move the cursor
7 Confirm the selection/ entry
8 Go back one layer
9 Select the output mode
10 Stop playback
11 Play the selected file
12 View the previous/ next file
Play the previous/ next file if in playback
13 Numeric Key
14 Delete last entry
15 Search video timeframe

6. START THE MPL026P

- **Turn On**
  - Insert the CF memory card with media files.
  - Connect the supplied power adapter and turn on the power switch, then the MPL026P will power on automatically.
  - If there is no picture on your TV, press the “TV MODE” button to select the correct output mode.
- **Status After Power On**
  - **Status 1:** If the **Autoplay** (Movies/ Picture/ All Files) function is enabled and there are media files on the CF card, the MPL026P will auto play media files after power on.
  - **Status 2:** If the **Autoplay** function is disabled, the main menu will appear as shown in the following figure after power on.

- **Turn Off:** Turn off the power switch to turn the MPL026P off.

7. SETTING UP

- Press the **SETUP** button to open the settings screen (If there is file that is being play, please stop first).
- There are two groups of sub-menu in the main menu ("Video Setup" and "Other Setup").
- In the settings screen, you can use the "▲、▼、◄、►" buttons to select an item, and press the **ENTER** button to confirm the selection.
- Press the **SETUP** button to save and quit the settings screen.

7.1 Video Setup

- **TV Standard:** Select the output TV video format (NTSC / PAL).
- **NTSC Active Output:** Select the output mode (HDMI/ VGA/ HD YPbPr).
- **Aspect-ratio:** Select TV mode 4:3, 16:9, 16:10 or 5:4.
- **HDMI:** Select the HDMI output resolution among 480i/ 480p/ 720p / 1080i/ 1080p. Select the "Auto EDID", the MPL026P will scan the display device connected and set the correct resolution automatically.
- **VGA 60Hz:** Select the VGA output resolution (640*480 / 800*600/ 1024*768/ 1280x1024 1360x768).
- **HD YPbPr 60Hz:** Select the YPbPr output resolution among 480p/ 720p/ 1080i.

7.2 Other Setup

- **Play OSD Display:** Enable or disable the OSD display.
- **Auto Play**
  - Movies: Play movies automatically after the MPL026P is powered on.
  - Pictures: Play pictures automatically after the MPL026P is powered on.
  - All Files: Play all the media files automatically after the MPL026P is powered on.
  - Off: Turn off the Auto Play function.
- **SlideShow Interval:** Set the time each picture is shown to 10, 15, 30 seconds or 1, 10, 15, 30 minutes or 1 hour.
- **Transition effect:** Set transition effects for your photo slideshow.

8. USING THE MPL026P

8.1 Play Media Files on the CF Card

Step 1: Insert the CF card with media files and turn on the MPL026P. Select the type of data (VIDEO/ AUDIO/ PICTURES) you want to play and press the **ENTER** button to take you into the "VIDEO LIBRARY", "AUDIO LIBRARY" or "PICTURE LIBRARY"

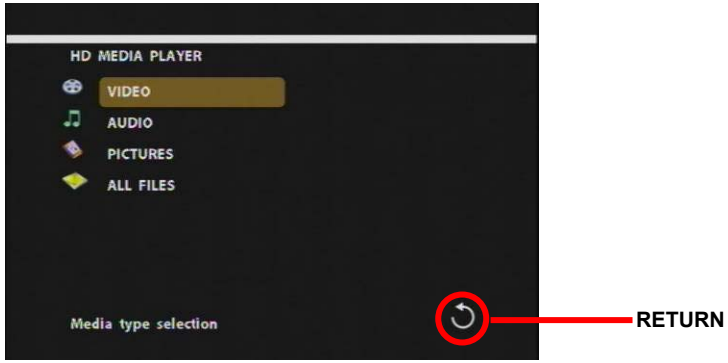

Note: If the symbol (return) appears on the screen, you can use **BACK** button to go back one layer.

Step2: Select a file you want to play, and press **ENTER** or **PLAY** button to play the selected file.

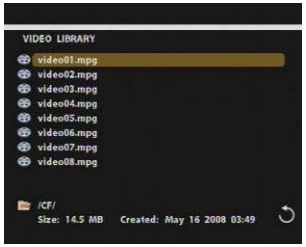

VIDEO LIBRARY

AUDIO LIBRARY

PICTURE LIBRARY

8.2 Using the Remote Control when Playing

- **SETUP:** Press the **SETUP** button with the "+ VOLUME –" button to adjust the brightness, contrast or saturation while the **video** or **picture** is playing.
  - **First Press:** Adjust the brightness.
  - **Second Press:** Adjust the contrast.
  - **Third Press:** Adjust the saturation.

Brightness

Contrast

Saturation

- **MUTE:** Mute the sound while the movie or music is playing.
- **+ VOLUME -:** Increase/ decrease the volume while the **video** or **music** is playing.
- **PREV / NEXT:** Play the previous/ next file.
- **STOP:** Stop playing, and go back one layer.
- **INFO:** Display the information of file.

File Information

- *** # (search function):** Search video (movie) timeframe.
  Press the "*** #**" button and use the numeric key to enter the initial time, and then press the **ENTER** button to play.

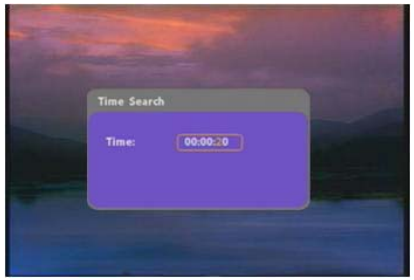

9. TROUBLESHOOTING

Situation	Check Point
No Picture	1. Check power cable and power switches. 2. Ensure the VGA or HDMI cable is connected between the MPL026P and TV. 3. Press the “TV MODE” button on the remote control to select the correct output mode. 4. Make sure the file format on the CF card is correct. 5. Check if the display device is switched to correct video input source.
No Response From the Remote Control	1. Ensure that the battery (CR2025 3v lithium battery) in the remote control and it is inserted the correctly. 2. Check for any barrier between the remote control and MPL026P.
No sound	1. Check if the mute function is on. 2. Check if the volume is set properly. 3. Check if audio cable has been connected correctly.

Probleme mit einem tbm Gerät? Bitte kontaktieren Sie uns.

Wenn Sie technische Fragen an die Serviceabteilung von tbm haben, senden Sie eine E-Mail an service@tbmgmbh.de und machen bitte folgende Angaben zu Ihrem Gerät:

1. Modell Bezeichnung und Nummer:
2. Seriennummer:
3. Firmware Version:
4. Speichergröße und Fabrikat der Speicherkarte:
5. Eine Beschreibung des Problems:
6. Den Namen des Händlers oder der Internetadresse, wo Sie das Gerät erworben haben.

tbm Technologieberatung & Medienservice GmbH

Schragenhofstraße 35

D-80992 München

Fon + 49 (0) 89 30 76 42 81

Fax + 49 (0) 89 30 76 42 83

E-Mail service@tbmgmbh.de